# GUIDE



#### SCIENCE. SERVICE. SAFETY.

# Recommended Practices and Precautions—Dos and Don'ts

# Dos

- Always verify thread sealants, gasket lubricants, or fire stop materials compatibility at <u>fbcsystemcompatible.com</u>.
- Do verify support hangers can be used with BlazeMaster<sup>®</sup> CPVC.
- Do use the correct tools to cut BlazeMaster fire sprinkler systems, such as wheel cutters, approved ratchet cutters, fine toothed saw, or proper power saw.
- Do only use listed solvent cement and always follow application instructions.
- Do keep pipe and fittings in original packaging until needed.
- Do store pipe and fittings with an opaque tarp, if stored outdoors, to avoid direct sunlight.
- Do cut the pipe ends square to ensure a proper solvent cement joint.
- Do deburr the inside of the cut pipe and bevel the outside of the pipe end before solvent cementing.
- Do apply solvent cement to the outside of the pipe first, then fitting, to prevent puddles from developing on the inside of the fitting.
- Do always solvent cement sprinkler head adapters prior to installing sprinkler heads to avoid cement obstructing the waterway.
- Do rotate the pipe one-quarter turn when fitting bottoming pipe in socket when installing the pipe into the fitting during solvent cementing.

- Do support sprinkler head properly to prevent lifting of the head through the ceiling when activated.
- Do keep threaded rod within 1/16" of the pipe.
- Do account for movement due to expansion and contraction when designing a fire system.
- Do follow the manufacturer's recommended cure times prior to pressure testing.
- Do perform hydrostatic testing in accordance with the manufacturer's instructions.
- Do fill lines slowly and bleed the air from the system prior to pressure testing.
- Do follow the latest NFPA standards for proper use of antifreeze solutions.
- Do cut out the cracked or damaged pipe at least 6" before using remaining pipe.
- Do install BlazeMaster CPVC pipe and fittings in wet systems only or specially listed dry systems.
- Do ensure all installers are certified with current BlazeMaster Fire Protection Systems training; training is required every two years.
- Do use flexible metal couplers with BlazeMaster CPVC grooved adapters.
- Do always post jobsite notifications in high frequented areas and inform other trades and job overseers for compatibility.

# Don'ts

- Do not use petroleum or solvent-based paints, sealants, lubricants or fire stop materials.
- Do not use any glycol-based antifreeze solutions.
- Do not use Teflon tape and thread sealants simultaneously.
- Do not use tape or dope when installing specialty sprinkler head adapters like Rapid Seal<sup>®</sup> and InstaSeal<sup>®</sup>
- Do not use solvent cement that is expired, exceeds shelf life, or has become discolored or gelled.
- Do not connect rigid metal couplers to BlazeMaster CPVC grooved adapters.
- Do not use edible oils as a gasket lubricant.
- Do not thread BlazeMaster CPVC pipe.
- Do not allow solvent cement to plug the sprinkler head orifice.
- Do not use solvent cement near sources of heat, open flame, or when smoking.
- Do not pressure test until recommended cure times are met.
- Do not use dull or broken cutting tool blades when cutting pipe.
- Do not use ratchet cutters below 50°F (10°C).
- Do not reference the FBC<sup>™</sup> System Compatible Program for brands other than BlazeMaster<sup>®</sup> CPVC, Corzan<sup>®</sup> CPVC, and FlowGuard<sup>®</sup> Gold CPVC.
- Do not install directly over air plenums; BlazeMaster CPVC must be installed adjacent to a return air grill.
- Do not install tape, insulated wire, or cable in direct contact with BlazeMaster CPVC pipe.

# **BlazeMaster**<sup>®</sup>

**The Lubrizol Corporation, a Berkshire Hathaway company** 9911 Brecksville Road Cleveland, Ohio 44141-3201 USA 216.447.5330 blazemaster@lubrizol.com

The information contained herein is reliable based on current information but the advertiser makes no representations, guarantees or warranties, express or implied, including any implied warranties of merchantability or fitness for a particular purpose, or regarding the completeness, accuracy, or timeliness of any information. Always consult your pipe and/or fitting manufacturer for current recommendations.



©The Lubrizol Corporation 2025, all rights reserved. All marks are property of Lubrizol Advanced Materials, a Berkshire Hathaway Company.

# **Solvent Cement Cure Times**

## Table 1

## 225 PSI (1552 KPA) Test Pressure (Maximum)

Ambient Temperature During Cure Period

Pipe Size	60°F to 120°F (16°C to 49°C)	40°F to 59°F (4°C to 15°C)	0°F to 39°F (-18°C to 4°C)
3/4" (20 mm)	1 hr.	4 hrs.	48 hrs.
1" (25 mm)	1 1/2 hrs.	4 hrs.	48 hrs.
1 1/4" and 1 1/2" (32 and 40 mm)	3 hrs.	32 hrs.	10 days
2" (50 mm)	8 hrs.	48 hrs.	Note 1
2 1/2" and 3" (65 and 80 mm)	24 hrs.	96 hrs.	Note 1

#### Table 2

## 200 PSI (1379 KPA) Test Pressure (Maximum)

Ambient Temperature During Cure Period

Pipe Size	60°F to 120°F (16°C to 49°C)	40°F to 59°F (4°C to 15°C)	0°F to 39°F (-18°C to 4°C)
3/4" (20 mm)	45 mins.	1 1/2 hrs.	24 hrs.
1" (25 mm)	45 mins.	1 1/2 hrs.	24 hrs.
1 1/4" and 1 1/2" (32 and 40 mm)	1 1/2 hrs.	16 hrs.	120 hrs.
2" (50 mm)	6 hrs.	36 hrs.	Note 1
2 1/2" and 3" (65 and 80 mm)	8 hrs.	72 hrs.	Note 1

# Table 3 100 PSI (690 KPA) Test Pressure (Maximum)

Ambient Temperature During Cure Period

Pipe Size	60°F to 120°F (16°C to 49°C)	40°F to 59°F (4°C to 15°C)	0°F to 39°F (-18°C to 4°C)
3/4" (20 mm)	15 mins.	15 mins.	30 mins.
1" (25 mm)	15 mins.	30 mins.	30 mins.
1 1/4" (32 mm)	15 mins.	30 mins.	2 hrs.

**Note 1:** For these sizes, the solvent cement can be applied at temperatures below 40°F (4.5°C), however, the sprinkler system temperature must be raised to a temperature of 40°F (4.5°C) or above and allowed to cure per the above recommendations prior to pressure testing.